


LAB 2: P2P Connections

Method 1: Using LAN Cable (Wired Connection)


Step 1: Connect Both Systems use an Ethernet (LAN) cable.

Step 2: Set IP Address Manually


Step i : Go to control panel

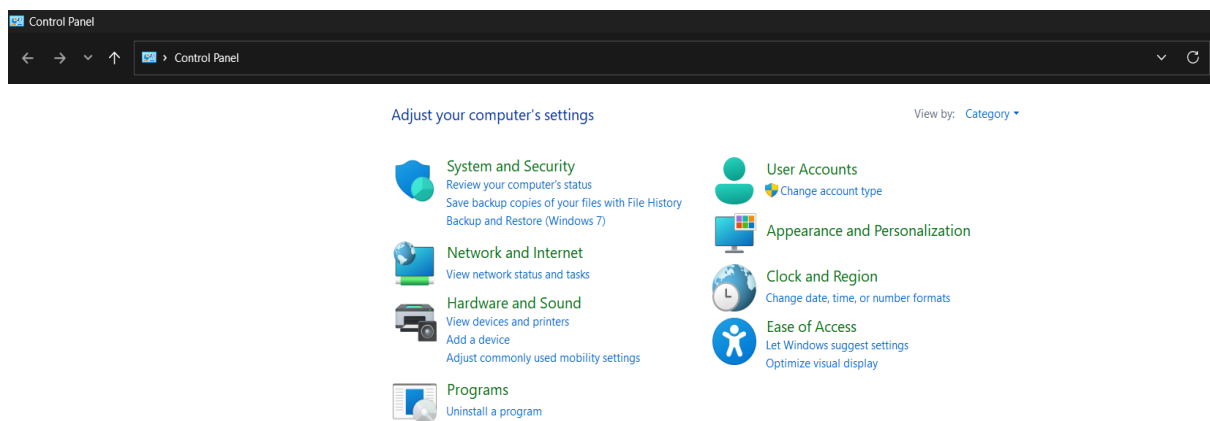


Step ii : Click Network and Sharing Center

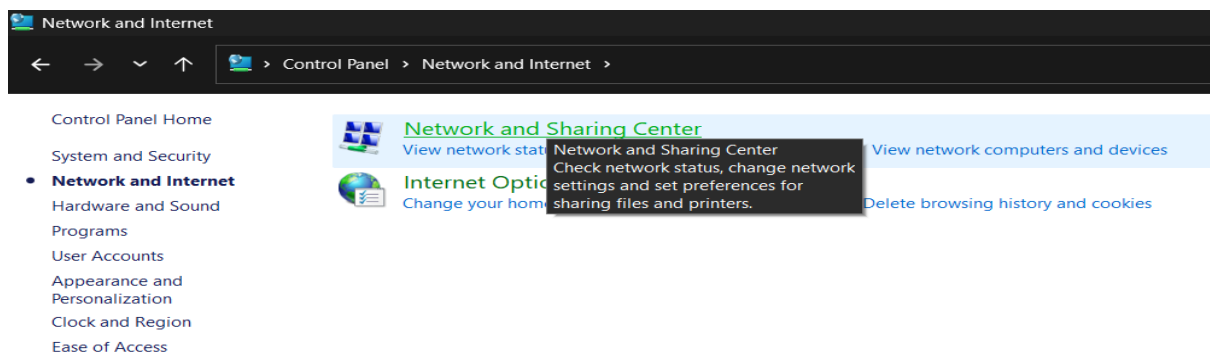


Step iii : Click Change adapter Settings

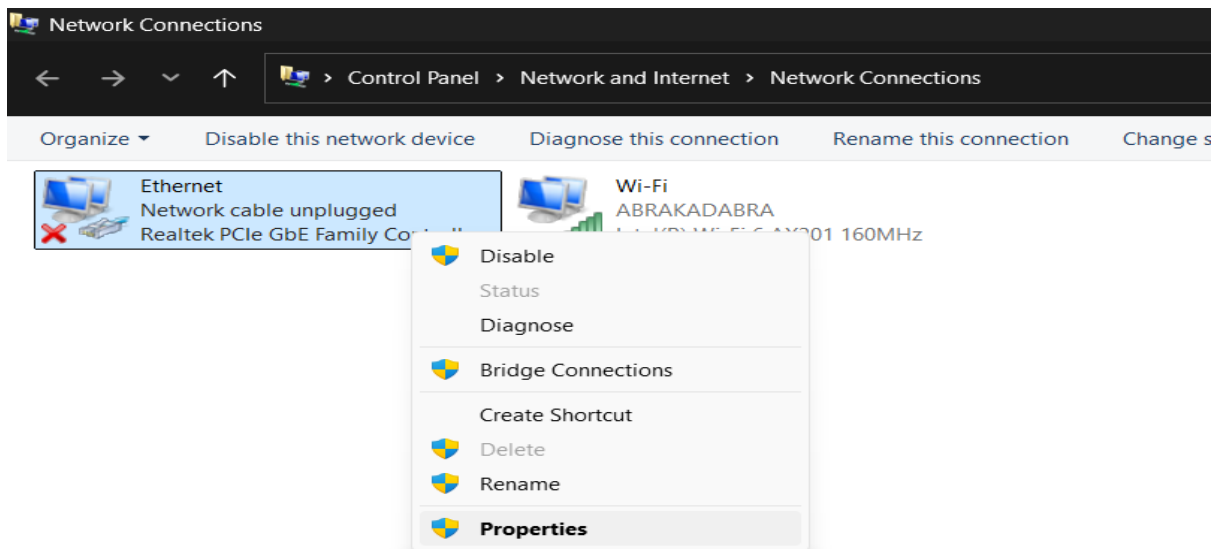

Step iv : Select Internet Protocol Version 4 (TCP/IPv4)

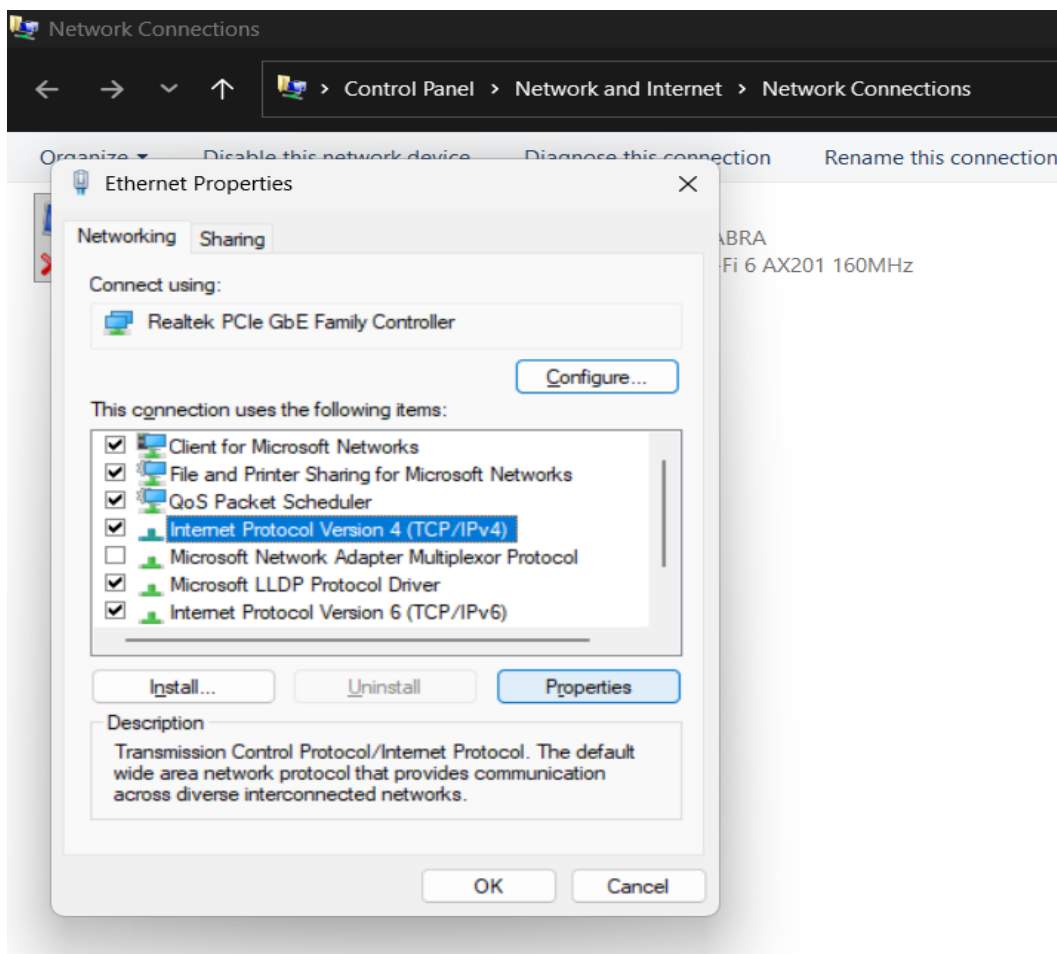

Step v : Click Properties

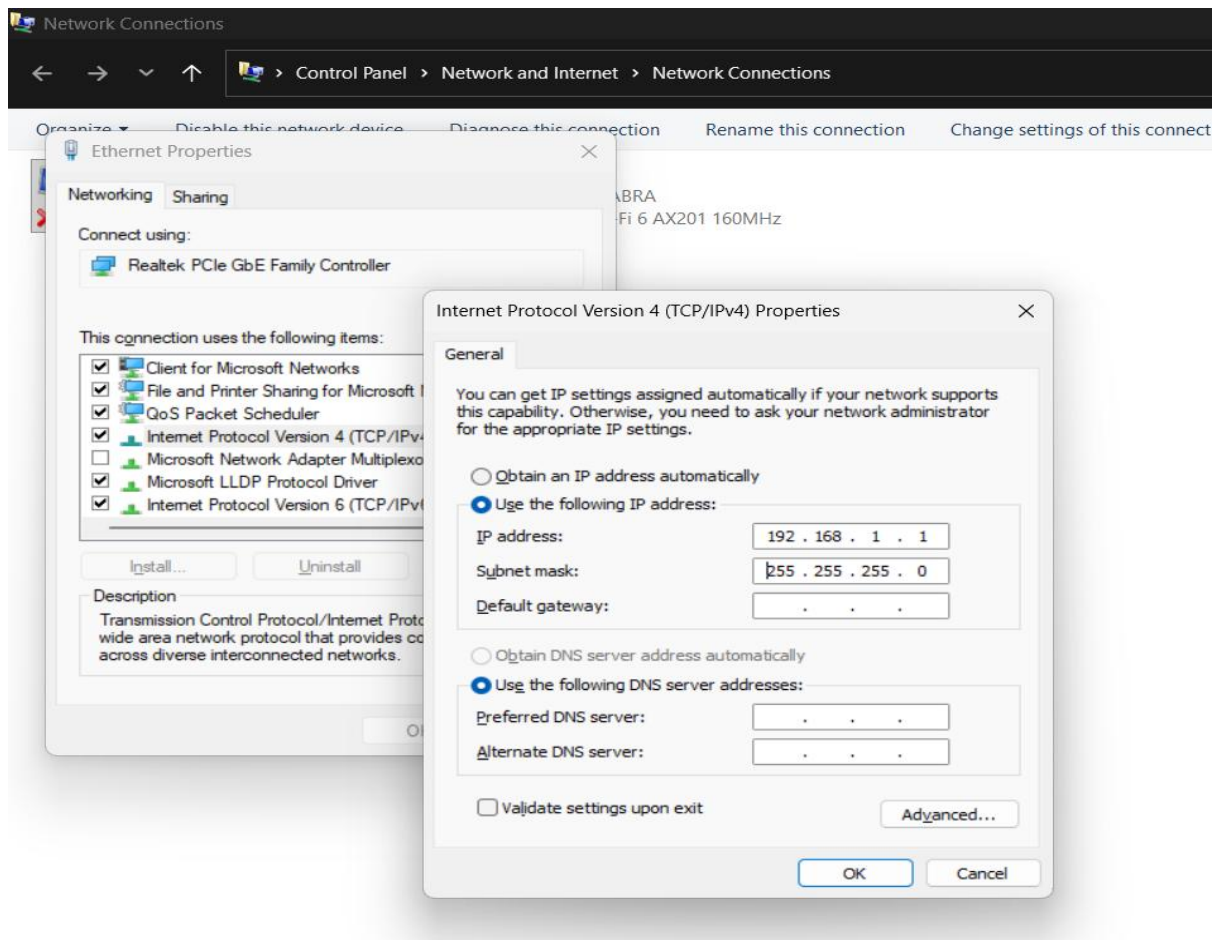

Set like this:

PC 1:

- IP address: 192.168.1.1
- Subnet mask: 255.255.255.0
- Default gateway: Leave blank


PC 2:

- IP address: 192.168.1.2
- Subnet mask: 255.255.255.0
- Default gateway: Leave blank

Click **OK**.


Step 3: Enable Network Discovery

Step I : Go to **Network and Sharing Center**

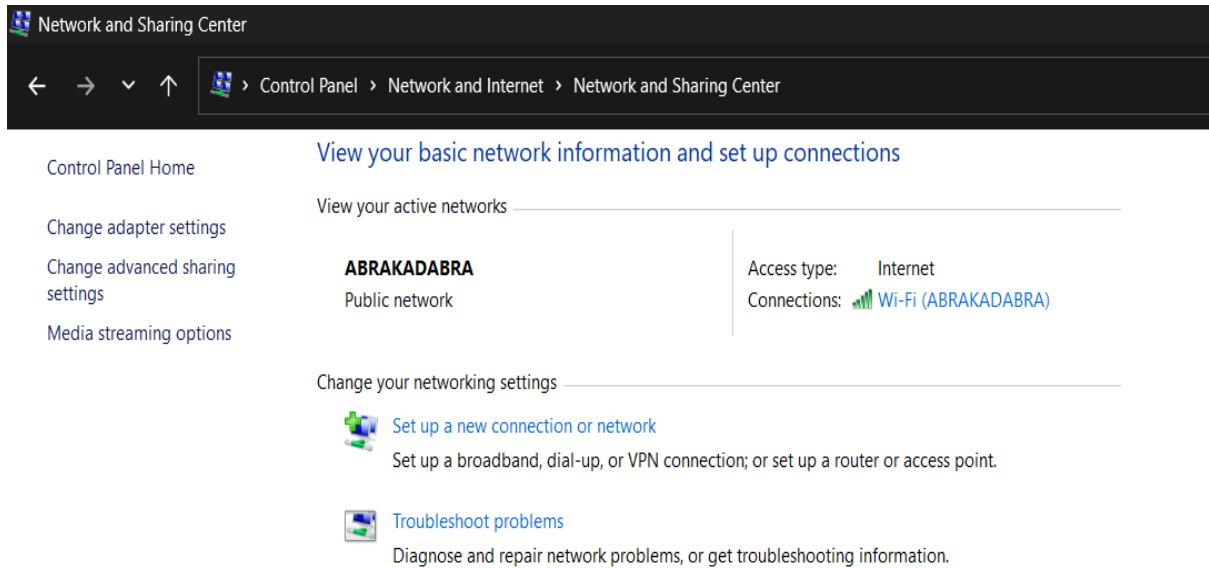

Step ii : Click Change advance sharing settings and Turn ON:


- Network discovery
- File and printer sharing

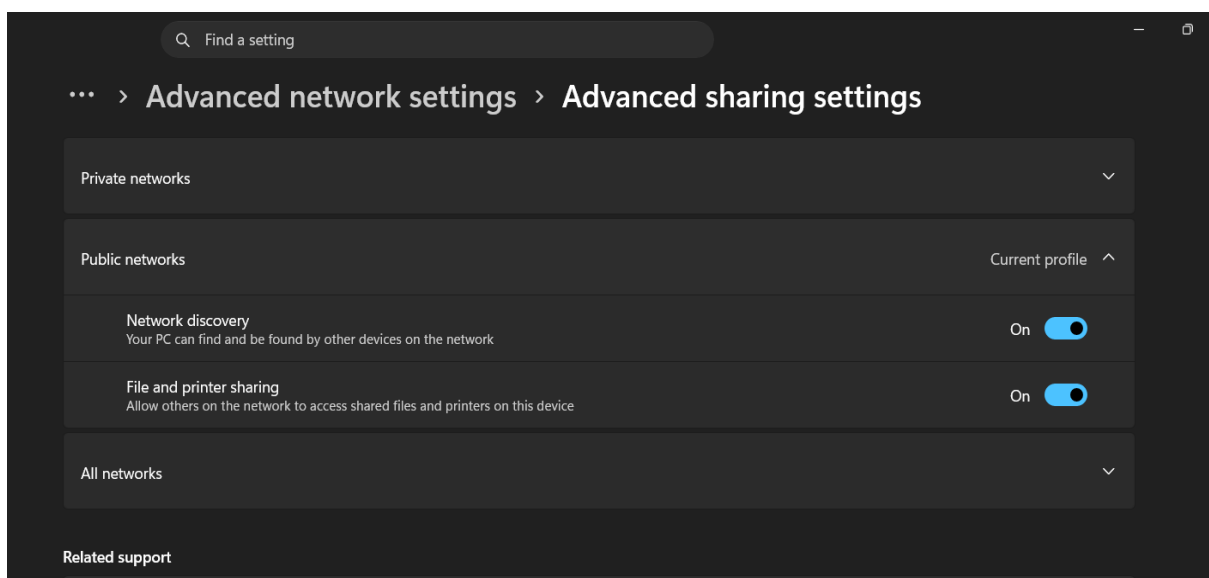


Step iii: Turn OFF password protected sharing (optional)

Step 4: Share Folder


Step I : Right click on folder, and click on properties.

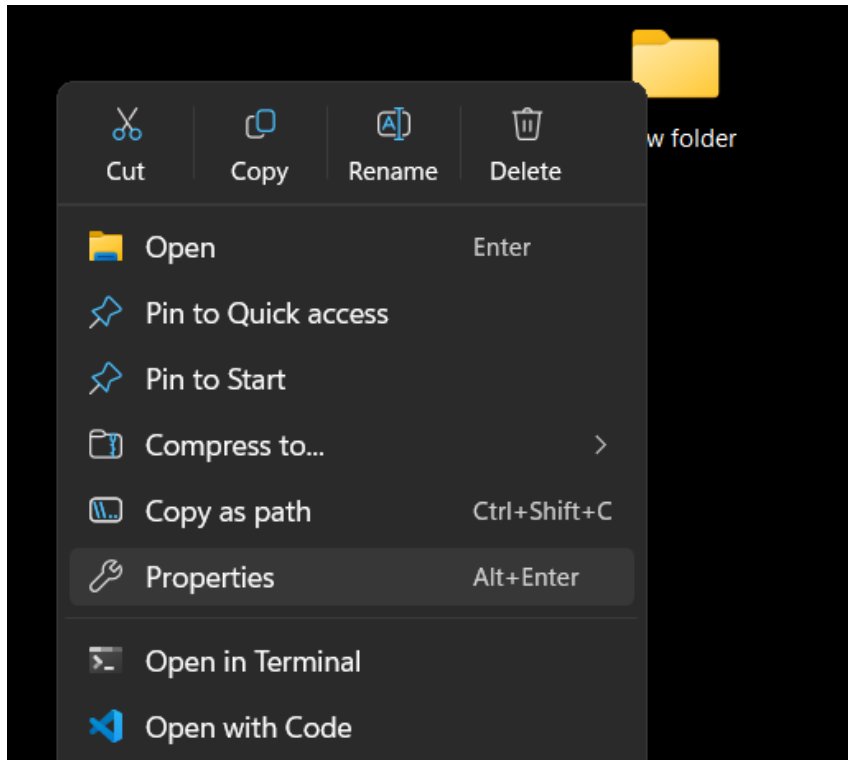


Step ii : Click Sharing tab

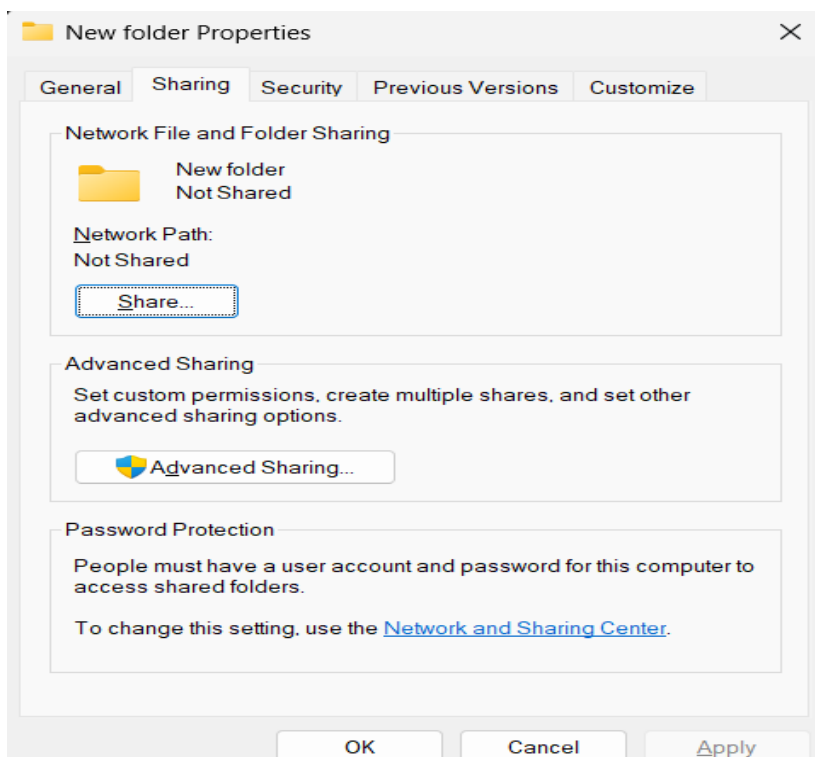

Step iii : Click Advance Settings and click share this folder

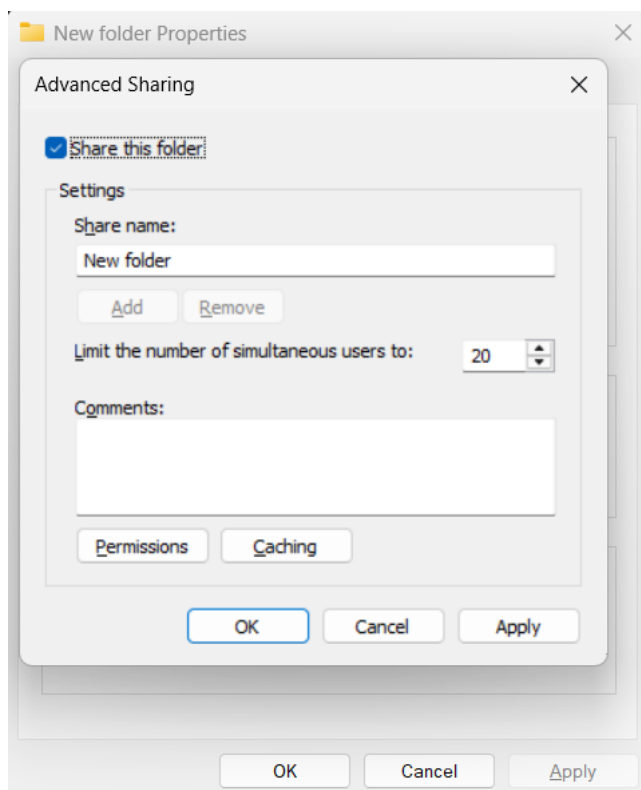

Step iv : Click Permissions -> Allow full control

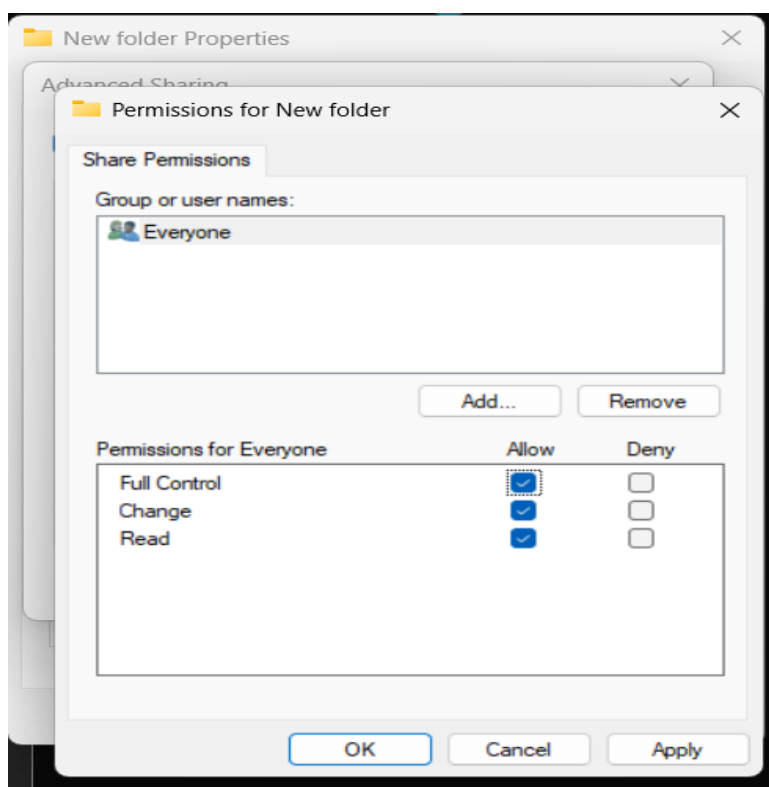

Step v : Click OK.

Step 5: Access Shared Folder

On second PC:

- Press **Windows + R**
- Type: 192.168.1.1
- Press Enter

You will see shared folder.

Method 2: Using Wi-Fi (Without Internet)

1. Connect both systems to same Wi-Fi network.
2. Follow Step 2, 3, 4 from above.
3. Find IP using command: ipconfig
4. Use: \\IP_address