



LAB 4 : Windows Defender Firewall

Step 1: Launch the Control Panel on your computer.


Step 2: Select “Windows Defender Firewall” followed by “Advanced Settings” on the left- side pane.

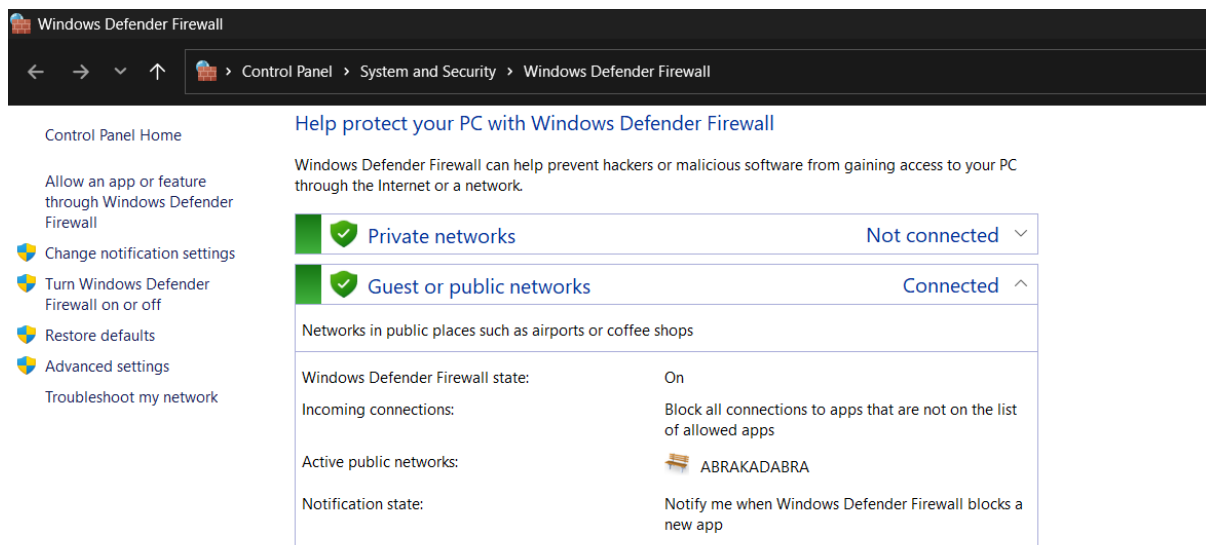


Step 3: Right-click on “Outbound Rules” from the menu on the left and select “New Rule.”

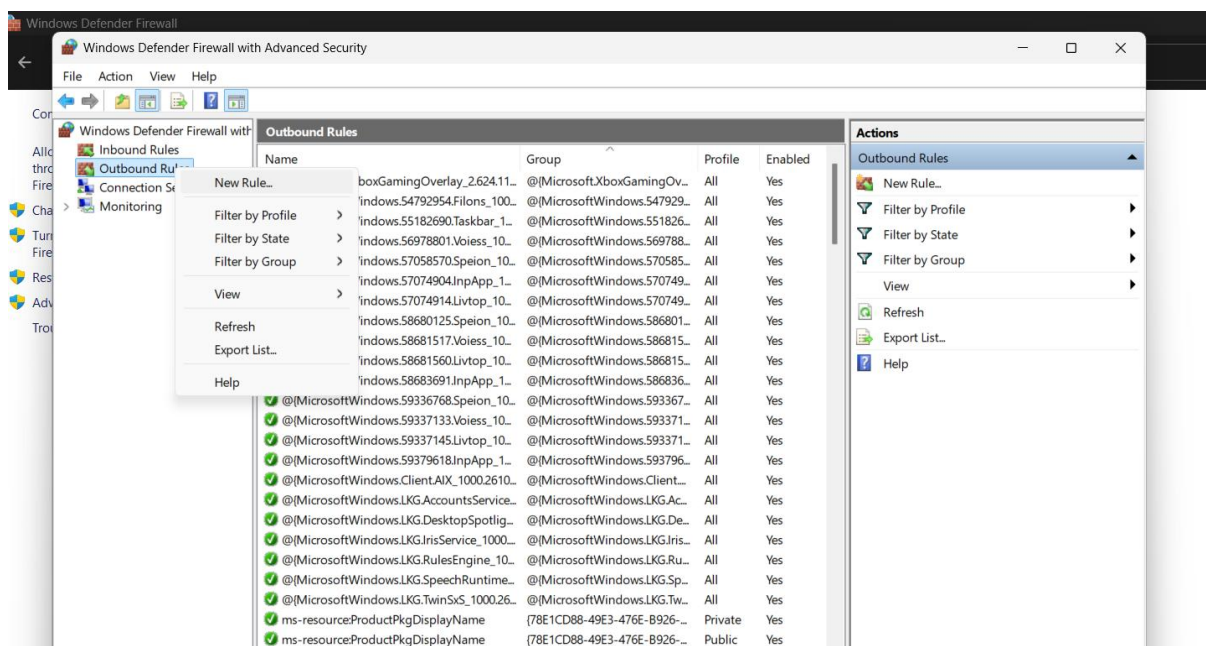


Step 4: When a new window pops up, select the “Custom” option followed by “Next.”

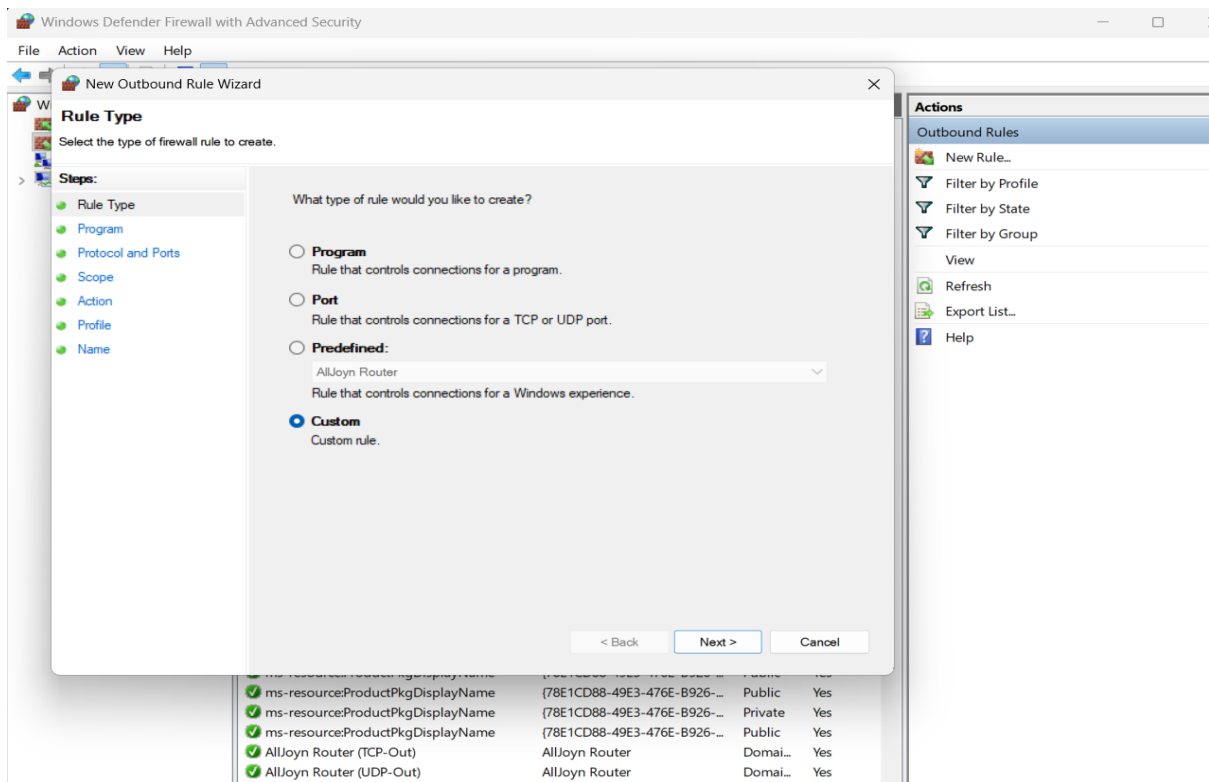


Step 5: On the next window, select “All programs” and again select “Next.”

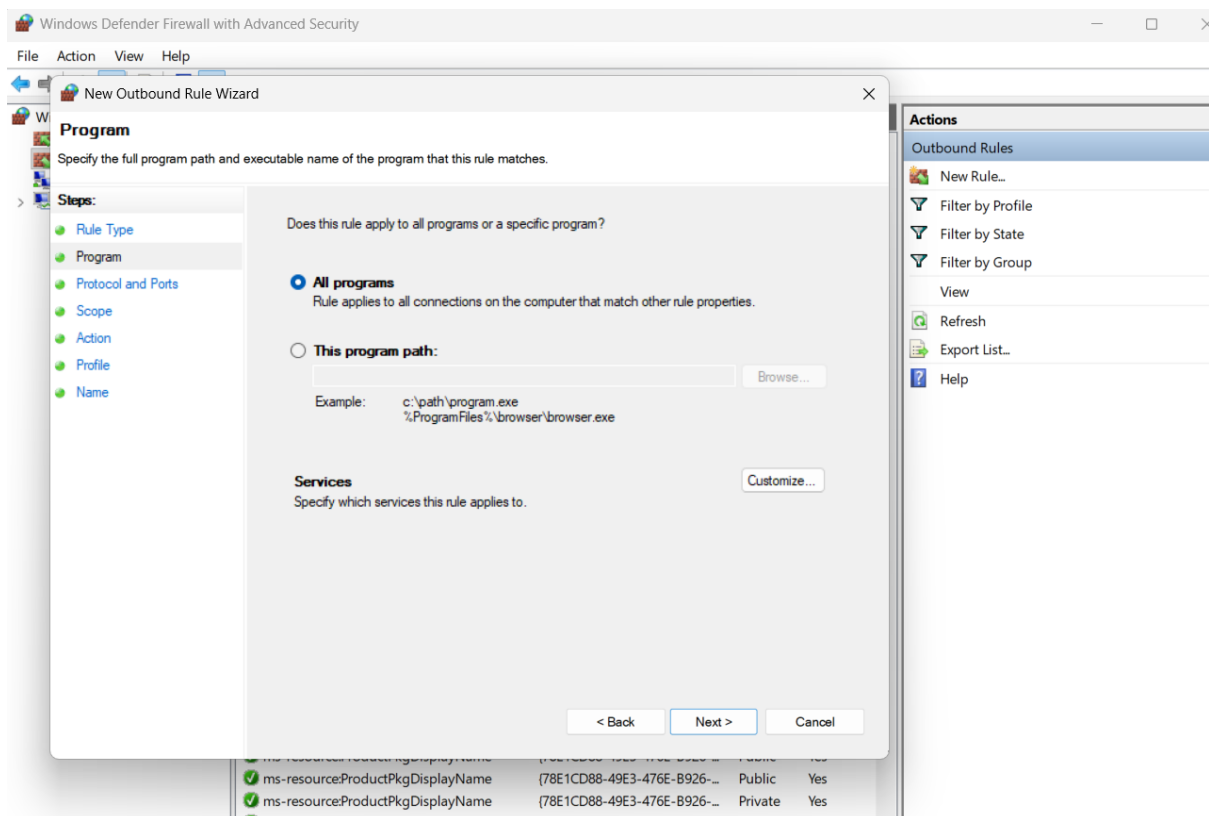

Step 6: For 'Protocol and Ports' directly click next.

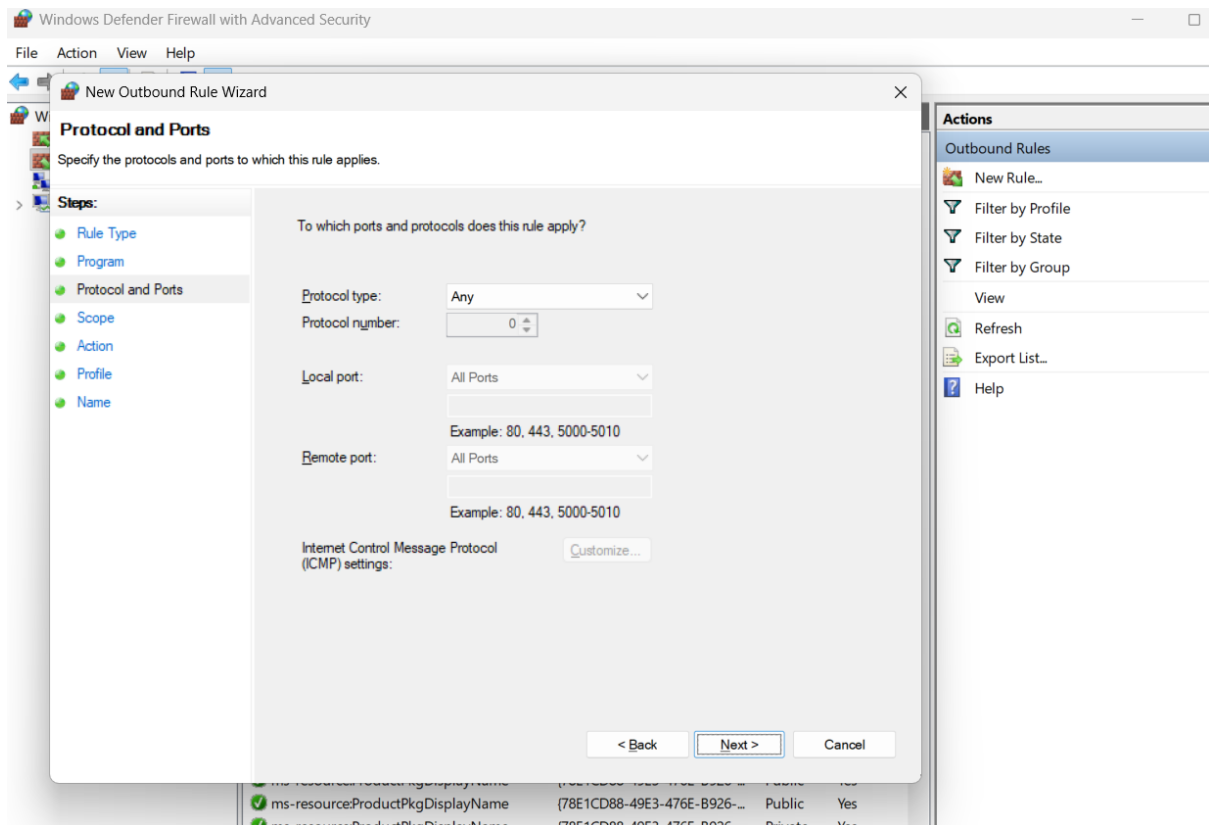

Step 7: Select the "These IP addresses" option under "Which remote IP addresses does this rule apply to?" and click next

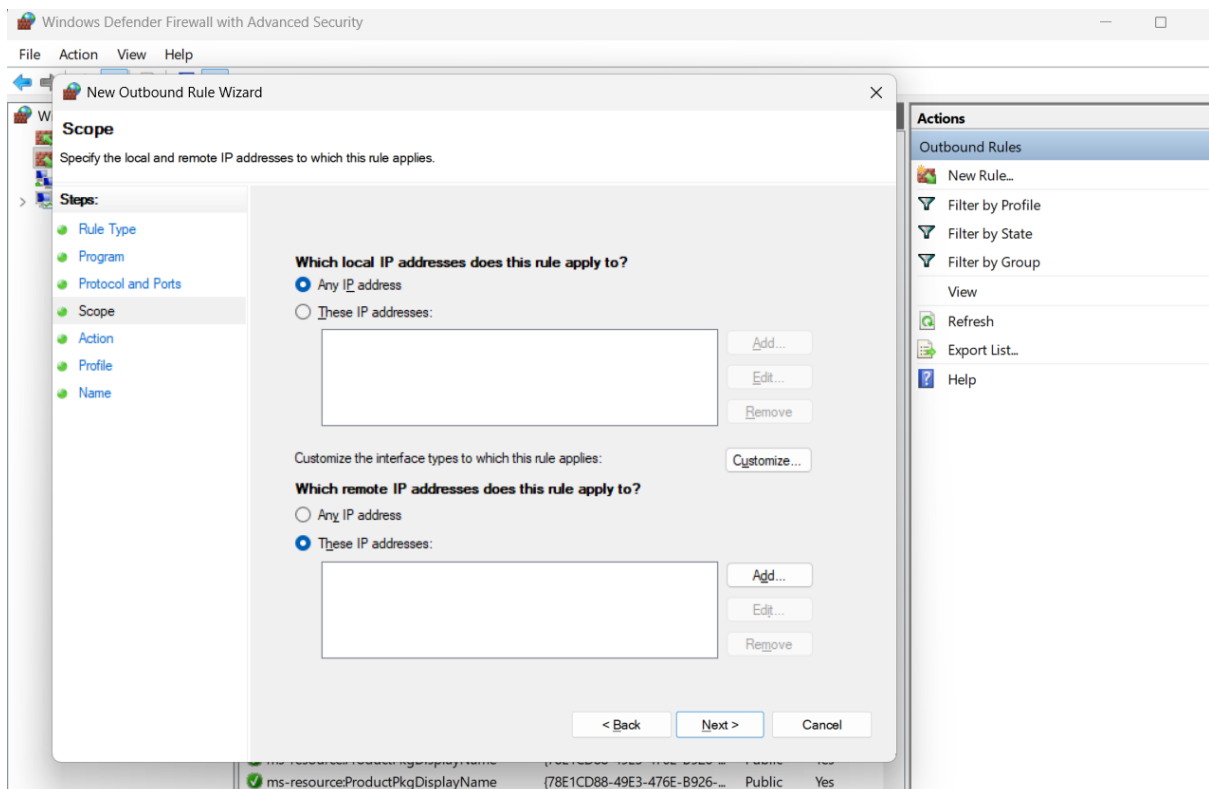

Step 7: Open the Command Prompt as Administrator by entering “CMD” into the search box.

```
Administrator: Command Prompt
Microsoft Windows [Version 10.0.26200.7922]
(c) Microsoft Corporation. All rights reserved.

C:\Windows\System32>
```

Step 8: Enter “nslookup www.facebook.com” and press the Enter Button.


```
Administrator: Command Prompt
Microsoft Windows [Version 10.0.26200.7922]
(c) Microsoft Corporation. All rights reserved.

C:\Windows\System32>nslookup www.facebook.com
Server:      UnKnown
Address:     10.69.182.252


Non-authoritative answer:
Name:   star-mini.c10r.facebook.com
Addresses:  2a03:2880:f368:1:face:b00c:0:25de
           57.144.208.1
Aliases:  www.facebook.com

C:\Windows\System32>
```


Step 9: Click on “Add” and enter the IP addresses you want to block. Then select “Next.”

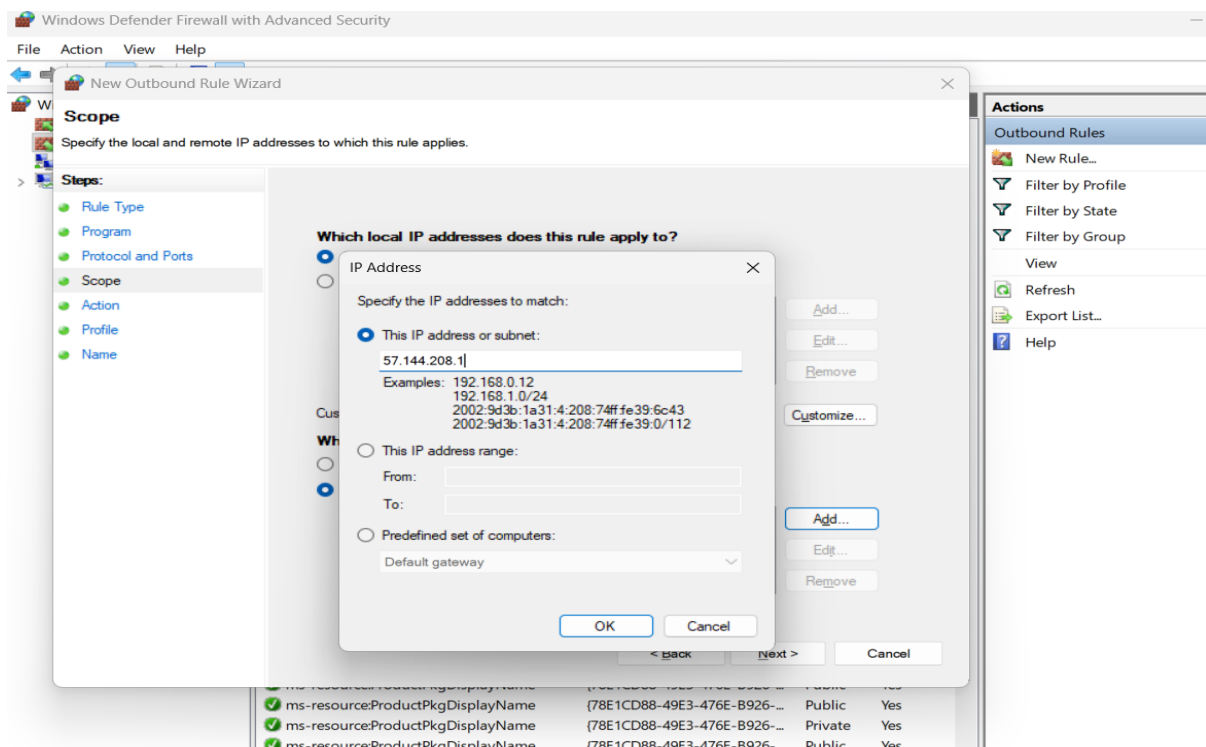


Step 10: Make sure to choose the “Block the connection” option and click on “Next.”

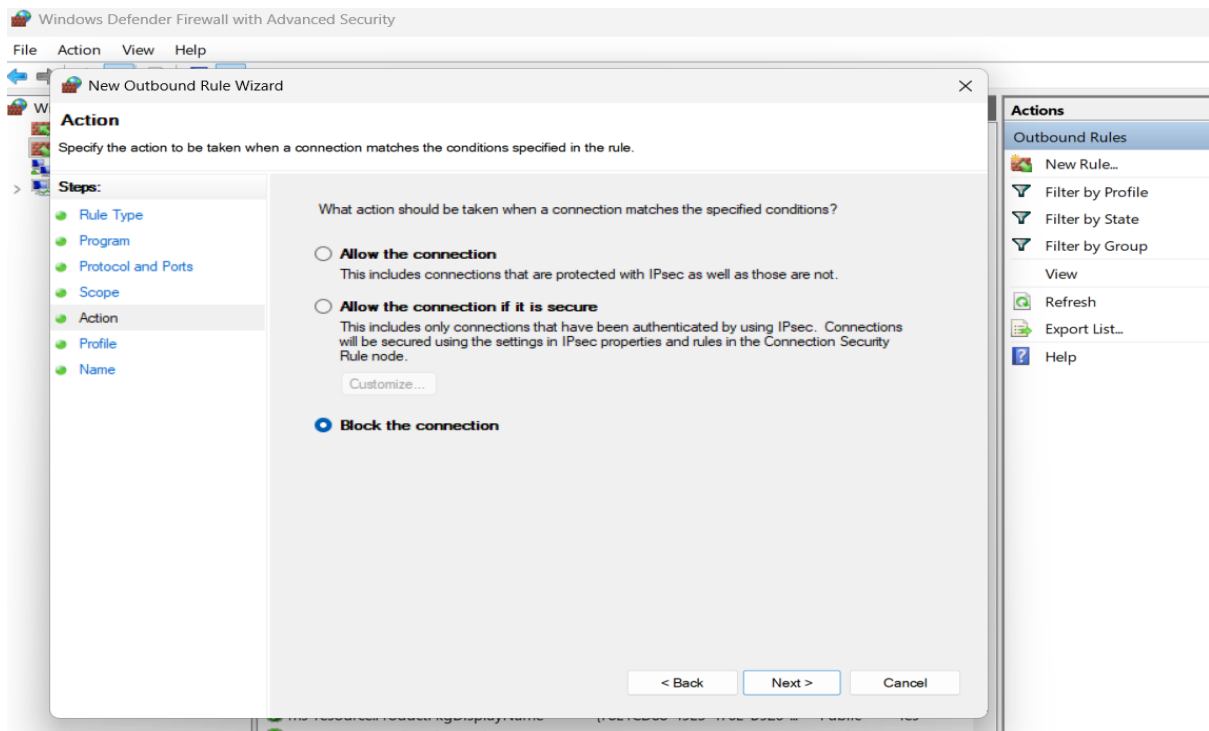

Step 9: Choose whether the rule applies to Domain, Private, or Public. You can also select all three.

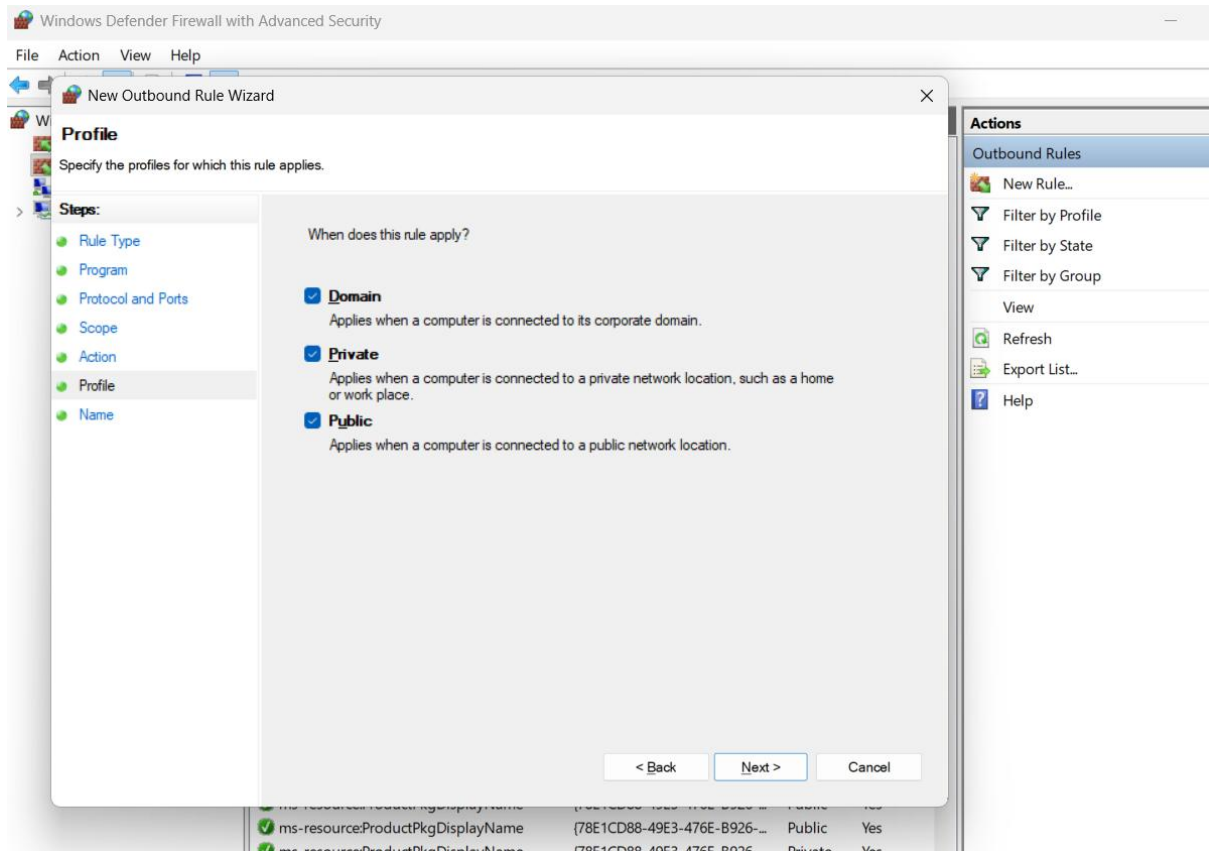

Step 10 : Select “Next,” add a name or description for this rule, and select “Finish” to complete the action.

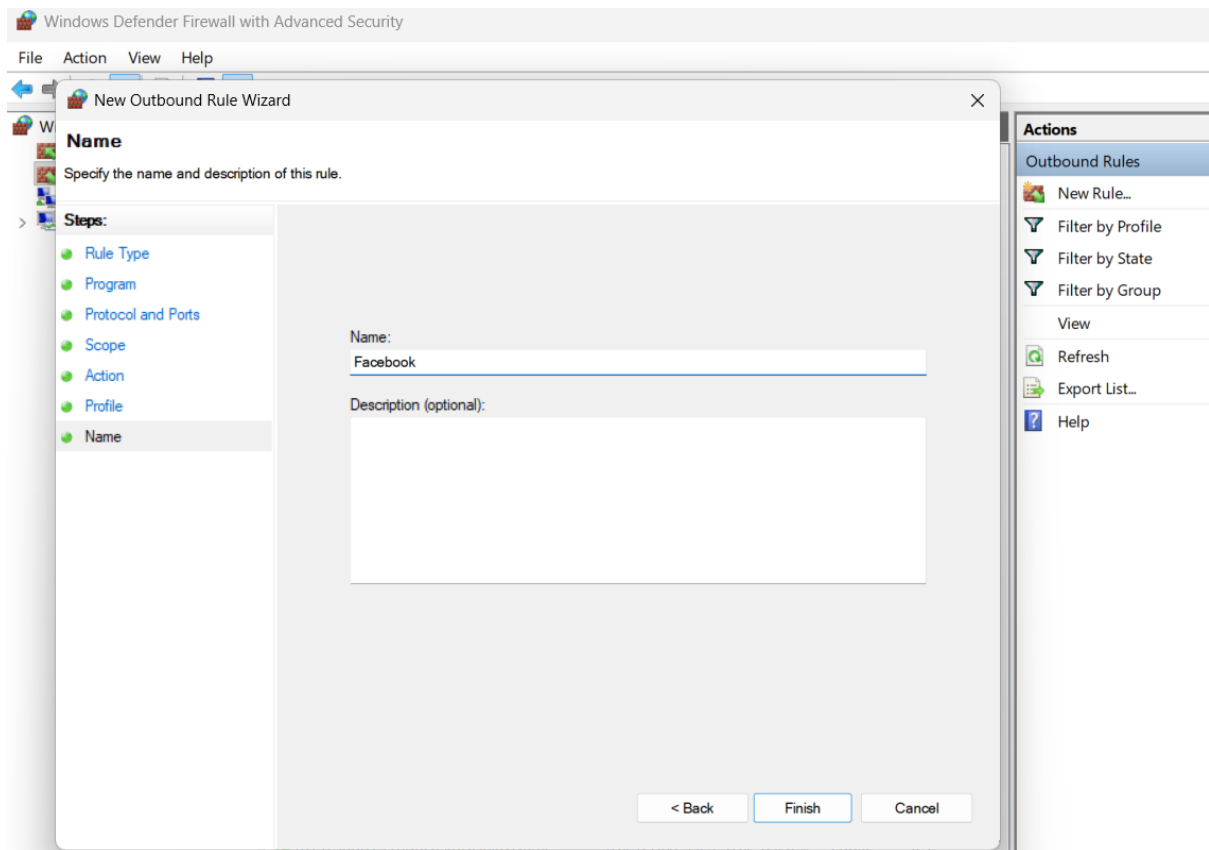

Step 11: Finish and Check for Blocked website

